















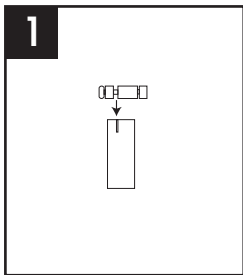
# REXER ROLLER STAND

## Parts


- White nylon washer x 2 
- 3/8 Nut x 1 
- 3/8 Washer x 1 
- 3/8 Bolt x 1 
- Carriage bolt x 1 
- Wing nut x 1 
- U brace x 1 

- Quick release clamp x 1 
- M6 Button head bolts x 4 
- Rubber feet x 4 
- Upper hook x 1 
- Lower vertical upright x 1 
- Base assembly x 1 
- Plugs x 4 


## Assembly




**1** Install seat clamp onto lower vertical upright with a slit near the edge

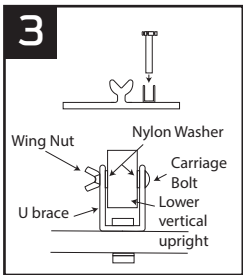


**3** Grab the carriage bolt, wing nut, 2 white nylon washers, and lower vertical upright with seat clamp installed. Locate end with two holes, this side will be installed into U brace. Place white nylon washers in-between the inside of the U brace and the lower vertical upright. Install wing nut on the outside of the U brace, tighten till snug.

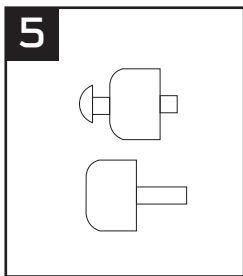


**5** Locate the 4 rubber feet and 4 button head bolts. Install M6 button head bolt from the under side of the rubber foot. The bolt will be sticking up from the flat side of the rubber foot. Firmly press in M6 button head bolt into each of the rubber feet.

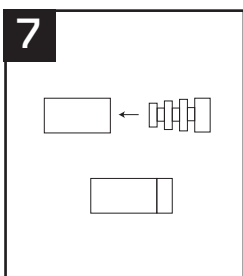


**7** Locate 4 square plugs and press into the square opening on the left and right side of the base

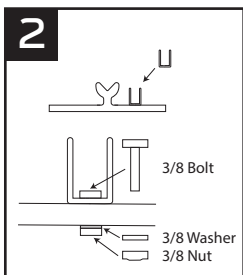

**2** Locate U brace, 3/8 bolt, 3/8 washer, and 3/8 nut. Insert 3/8 bolt through U brace then install into the base. Flip over the base and place washer on bolt then screw on 3/8 bolt. Use a 14mm wrench to tighten till snug

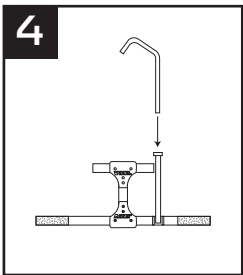

**4** Grab upper hook and insert into the pipe where the seat clamp is attached.

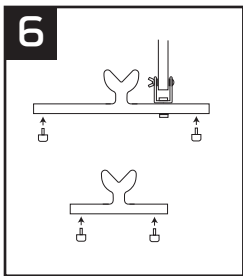


**6** Install the 4 rubber feet to the under side of the base with M4 Allen key


# REXER

## ROLLER STAND


### How to use

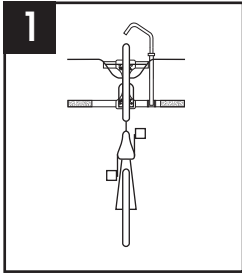


**1** Place Rexer Roller Stand on level ground. The vertical upright/ upper hook should be on the drive side of the bicycle. Place the front wheel between the wheel supports

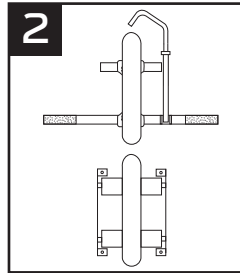


**2** With the front wheel on the Roller Stand place Rexer Rollers underneath the back wheel. Make sure the wheels are centered on the Rexer rollers. Both the Rexer Roller stand and Rexer Rollers assembly should be parallel to each other.

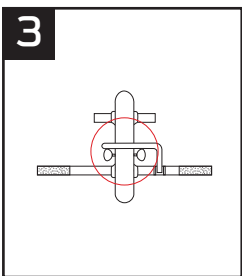


**3** Place upper hook in the area in front of the fork and wheel. Upper hook should be touching both the left and right arms of the fork arms and front wheel.

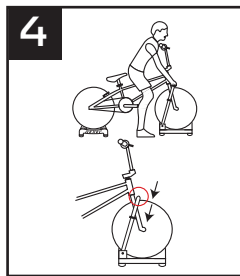

**4** While sitting on the top tube of the frame firmly press down on top of the upper hook with downward force matching the arrows then close the clamp.

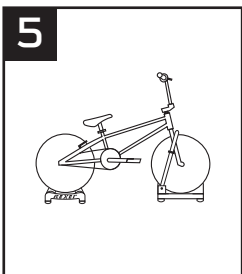

**5** The rider can now start pedaling.

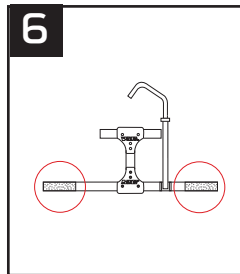

**6** To get off, step off the pedals then place feet on the circled sections of the base with grip tape on either side. Unlatch quick release clamp and pull up on the upper hook. Tilt the upper hook in front of the front wheel then remove bike.